




Air Belt Sander Item No : QB-311

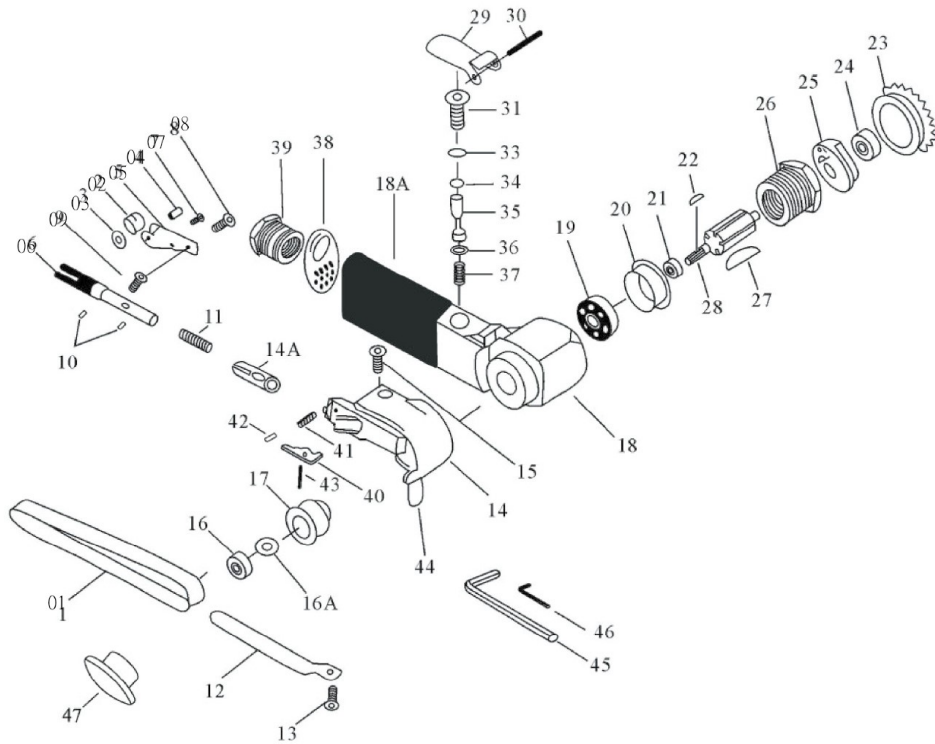

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List QB-311

	NO.	INDEX NO.	DESCRIPTION	Q'TY
●	01	QB-311P01	Grinding Belt (#100)	1
●	1A	QB-311P01A	Grinding Belt (#80)	1
●	1B	QB-311P01B	Grinding Belt (#120)	1
●	02	QB-311T02	Idle Pulley 10 Sub Assy	1Set
●	03	QB-311P03	Washer	1
●	04	QB-311P04	Idler Pulley Screw	1
★	05	QB-311P05	Bracket (10)	1
★	06	QB-311P06	Tension Rod (10)	1
★	07	QB-311P07	Set Screw (3x10)	1
★	08	QB-311P08	Flat Head Screw (3x8)	1
★	09	QB-311P09	Spring (1.0x7.2x6.5)	1
★	10	QB-311T10	Spring Pin (3x10) (2pcs)	1set
★	11	QB-311P11	Spring (1.07x4.0x35.5)	1
★	12	QB-311P12	Flat Shoe (10)	1
★	13	QB-311P13	Flat Head Screw (4x8)	1
★	14	QB-311P14	Wheel Guard Assy A	1
★	14A	QB-311P14A	Guard Bushing	1
★	15	QB-311P15	Cap Bolt (5x15)	1
★	16	QB-311P16	Hexagon Nut	1
★	16A	QB-311P16A	Washer	1
★	17	QB-311P17	Driving Pulley	1
★	18	QB-311P18	Housing	1
★	18A	QB-311P18A	Grip	1
▲	19	QB-311P19	Ball Bearing (628zz)	1
▲	20	QB-311P20	Front End Plate	1
★	21	QB-311P21	Spacer (8x11x3)	1
▲	22	QB-311P22	Woodruff Key (3x3x1)	1
★	23	QB-311P23	Cap	1
▲	24	QB-311P24	Ball Bearing (607zz)	1
▲	25	QB-311P25	Rear End Plate	1
★	26	QB-311P26	Cylinder	1
●	27	QB-311T27	Rotor Blade (5pcs)	1set
★	28	QB-311P28	Rotor	1
★	29	QB-311P29	Throttle Lever	1
★	30	QB-311P30	Spring Pin	1
★	31	QB-311P31	Throttle Bushing	1
▲	33	QB-311P33	O-Ring (P9)	1
▲	34	QB-311P34	O-Ring (P5)	1
★	35	QB-311P35	Valve Stem	1
▲	36	QB-311P36	O-Ring (3.6x2.4)	1
★	37	QB-311P37	Spring	1
★	38	QB-311P38	Exhaust Muffler	1
★	39	QB-311P39	Air Inlet Bushing	1
★	40	QB-311P40	Tension Release	1
★	41	QB-311P41	Spring	1
★	42	QB-311P42	Spring Pin (M2x6)	1
★	43	QB-311P43	Spring Pin (M2.5x10)	1
★	44	QB-311P44	Dust Cover	1
★	45	QB-311P45	Hexagon Wrench Key (4)	1
★	46	QB-311P46	Hexagon Wrench Key (1.5)	1
★	47	QB-311P47	Guard	1